

Temperature Monitors:

***These equipment sources are used by USAMMA DOC.**

Manufacturer:

Sensitech Inc.

800 Cummings Center

Suite 258X

Beverly, MA 01915-6197


(484) 530-2656

www.sensitech.com

All TempTale®4 Monitors are programmed with a custom Start-up delay, measurement interval and alarm settings which have been pre-determined by the customer.

Starting a TempTale®4 Monitor

- Press and release the Start button.
- The “Sunshine” icon ☀ appears in the upper left corner of the display.
- The TempTale4 will begin to record data after the start-up delay has passed.

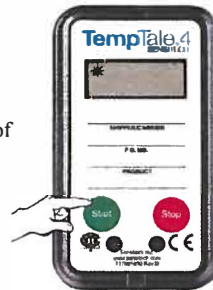

To mark an important event (“Date Stamp”)

- TempTale4 monitors provide an option to “Date Stamp” or mark an important event at any time during the monitoring cycle that will be visible when viewing the data. The mark is displayed as an arrow when viewing the graph and shown in italics when viewing the tabular data.
- To mark a graph while the monitor is recording, press and release the “Start” button.
- The “arrow” icon will appear temporarily in the lower left corner and the temperature history will appear on the display. Data appears as follows:
 1. Average temperature
 2. Highest temperature recorded
 3. Total time above high temperature limit
 4. Lowest temperature recorded
 5. Total time below low temperature limit

Alarm

When the TempTale4 is exposed to a temperature outside a pre-programmed limit and time threshold, an “Alarm bell” 🔔 will appear in the lower right corner of the LCD display.

Stopping a TempTale4 Monitor

Press and hold (1 to 3 seconds) the Stop button until the “Stop sign” ⬛ icon appears in the upper right corner of the LCD display.

Displayed Information

