



AcuTemp PX6L Courier

No Longer available on ECAT.

Purchase: Medex Supply

MFR Name: CSAFE GLOBAL

<https://medexsupply.com/mobility/walker-accessories/carry-pouches-baskets/>

MFR Part #: PX6L-S-2-8-12 or PX6L-S-2-8-48

Nomenclature: AcuTemp Courier PX6L Seasonal Refrigeration (Summer) . (12HR or 48 HR)

Refrigerant: PCM Belts (patent pending)

Payload Temp: 2-8°C

Performance: 12 hours or 48 hours

Outer Dimensions

LxWxH Inches: 13 x 13 x 11.3

Inside Dimensions

LxWxH Inches: 10.75 x 10.75 x 8

Payload Dimensions

LxWxH Inches: 8 x 8 x 8

Total Weight lbs (kg): 13.8 (6.27)

Holds approximately 88 vials

Available in four temperature ranges:

- Frozen (-20°C)
- +2°C to +8°C
- +2°C to +25°C
- +15°C to +25°C



"Globally Responsive – Ready and Resilient"



Acute® PX6L Packing Protocols 2C to 8C



Temperature-Sensitive Courier
12-hour 2°C - 8°C User Information

Packing Instructions

1. Place instruction card in plastic sleeve located on the inside lid of the courier.
2. Freeze(blue)/refrigerate(white) belts for a least 24 hours. Lay belts flat/not folded
3. Place the freezer belt into the insulated courier, lining the four walls.
4. Place the refrigerated belt into the insulated courier, lining the freezer belt.
5. Load product into payload area. **DO NOT add additional gel packs**
6. Place an appropriate data logger, **TempTale monitor**, into the courier
7. Close and zip the lid of the courier.
8. **Do not** use temperature-sensitive product if you notice the belts are not properly refrigerated/frozen (blue belts must be frozen and white belts must be refrigerated) when packing the courier.
9. Use the courier to transport refrigerated product for up to 12 hours.
10. Properly lift courier to/from vehicle.

Liz version 4-20-23

CSafe®, AcuTemp®, TempTale® and The Right Temperature® are registered trademarks of CSafe. © 2013 CSafe

2900 Dryden Road, Dayton, Ohio 45439 USA • Tel. 1.866.312.0114 • Fax. 937.312.1277

REV2



Temperature-Sensitive Courier
12-hour 2°C - 8°C User Information

2°C - 8°C Pack Out

BLUE
FREEZER BELT
Freeze 12+ Hours

WHITE
REFRIGERATOR BELT
Refrigerate 12+ Hours


INSTRUCTION CARD
Insert Here

INSULATED COURIER
Keep Room Temperature



2900 Dryden Road, Dayton, Ohio 45439 USA • Tel. 1.866.312.0114 • Fax. 937.312.1277

REV2

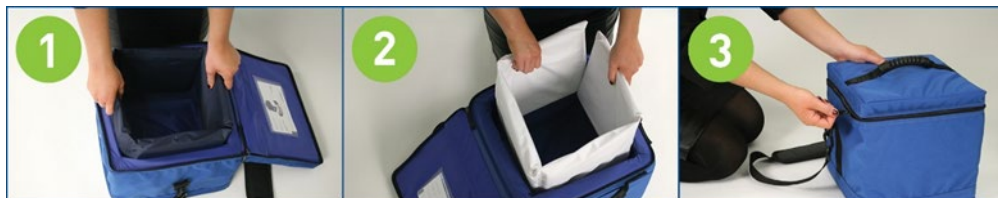

“Globally Responsive – Ready and Resilient”