



# Endurotherm Box




## ❑ Preparing Box for shipments.

- ❑ If possible, ensure the box is conditioned for at least 24 hours
- ❑ Ensure gel packs are conditioned for at least 24 hours.
  - ✓ Refrigerated vaccines, conditioned at 3C to 6C
  - ✓ Frozen vaccines, conditioned at -17C to -20C
- ❑ Each shipment must include a Temperature Monitoring Device (TMD) inside, centered on top of vaccine. DDL (DoD approved TempTale Monitor)
  - ✓ If a TempTale is used, condition for at least 24 hours.
  - ✓ Ensure TempTale is started and follow applicable instructions
- ❑ Follow packing protocol for each weather condition.

### Endurotherm Box Packing Steps

The packing or layering of the Endurotherm boxes is the same in principle for all three sizes (large, medium and small).

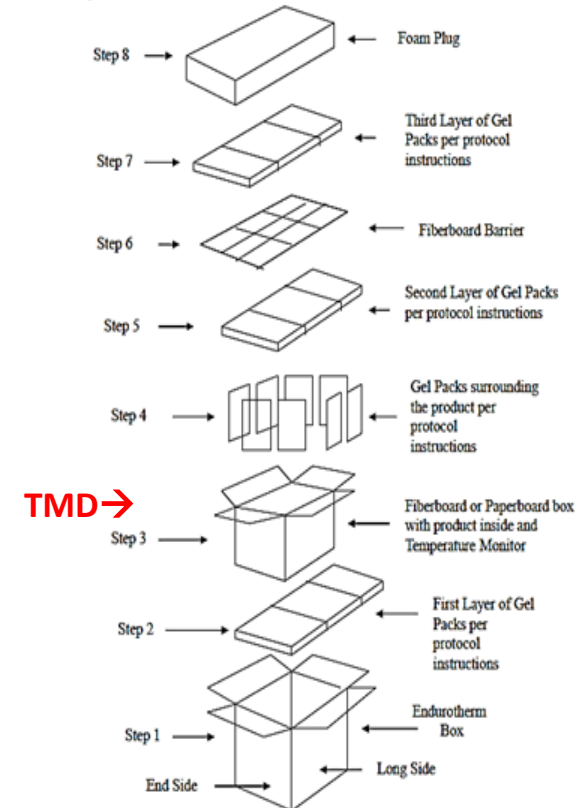

***“Globally Responsive – Ready and Resilient”***